

Struts - AXC000001


You can replace the wire formed struts with the new sheet metal struts. They fit the same holes as the wire formed struts and they also have two pre-drilled holes so you can mount the Dust Sentry to the new strut if desired.

Attaches to Cyclone

Attaches to Drum



RBB000003 - Sheet Metal Strut

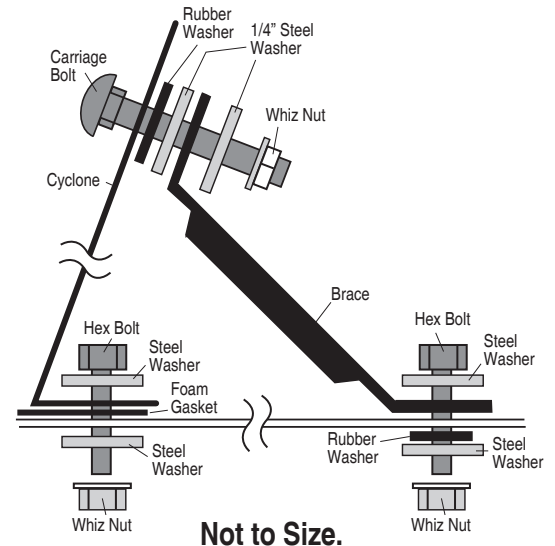

Not to Size.

Drum Handles - AXC000002





RHS0090403 - Web Handles

Threading the webbing of the handles.

1. Drill a 5/16" hole for handle placement.
2. Pull webbing through top loop of your handle plate.
3. Pull around and through the back of the second loop.
4. Pull around and through the front of the third loop.
5. Tuck any excess webbing behind the handle plate and secure your plate to the drum.



STP000006 - Handle Plate

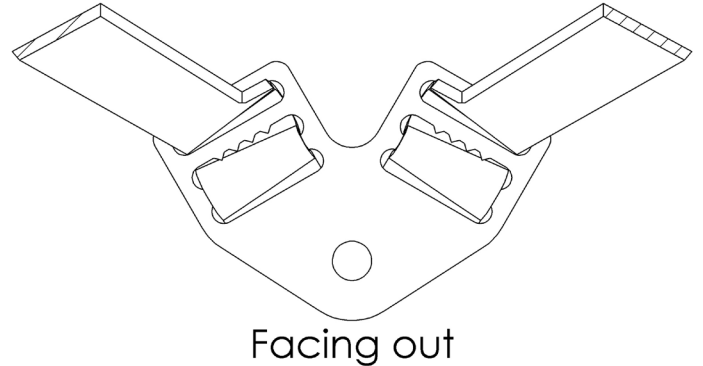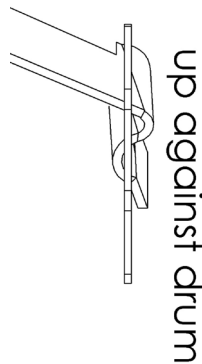

Tether Strap - AXC000003

1. Install a J-bolt in the front of the Universal Dolly.
2. Use one of the ladder lock slider buckles to secure one end of the strap to the J-bolt.
3. Loop the other end of the strap around the center of the inlet hose.
4. Use the second ladder lock slider buckle to secure the strap to the inlet hose.

RHS000050 - 50" Web Strap
RHS203016 - Lock Sliders



Thread strap through ladder lock slider buckle.

Loop this end around hose.

Pull strap tight



All hardware is included in the kits.